

How to Use Koala[®] Printable Shrink Film

What You Need



Inkjet Printer



Scissors



Heat Gun



Oven

Tips for Best Results

- Use light colors as prints will darken after shrinking.
- Print slightly larger than final size due to shrinkage.
- Use parchment paper to avoid sticking.
- Let the oven fully preheat before baking.

Safety Reminders

- Adult supervision is recommended when children are using the product.
- Avoid touching hot surfaces directly.

Sample Templates Included

Includes: Animals, Name Tags, Holiday Ornaments

Step-by-Step Instructions


1 Print

Print onto the rough side with an inkjet printer.



2 Cut

Cut out your design along the edges.

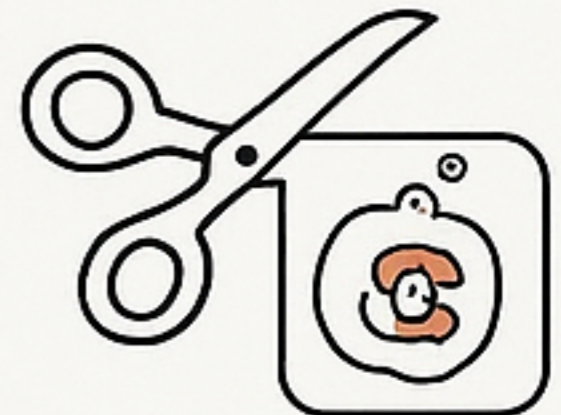

3 Bake

150–150°C
for 2–3 min.



4 Cool Down

Place on a flat surface to cool.

